

Screens (table and floor) and brackets

Number	Article number	Article title	Comments
1	50210	Insert nut M6x28	In A30 and A40 table screens
2	50194	Insert nut M6x8	In ScreenIT Standard and AT40 table screens
See pic	55116	Assembly bag ScreenIT desk clamp	For 641010, 641011, 641025, 641045, 641050, 643015
See pic	55117	Assembly bag ScreenIT desk mount	For 641020, 641058, 642039, 642042, 642058, 642066, 642077, 643043, 643047,
See pic	36109-1 / -2 / -3	Wheel for floor screens A30/A40, Woodland, Sketch, Scribble	Always lockable White, Black or Silver (1-pcs)
See pic	50167	Pin bolt M8x30	For A30 foot package
See pic	50191	Pin bolt M8x40	For A40 foot package
See pic	50010	Möbeltass (Felt glider) Ø17	For Pin foot A30 above screen
See pic	50011	Möbeltass (Felt glider) Ø28	For Foot package A30 / A40
See pic	50258	U-Key 17 mm to adjustable feet	Only for adjust the adjustable feet in floor screen booth
See pic	20458-1 / -2 / -3	Foot for A30 and A40 floor screen	White, black or silver
See pic	50164-1 / -2 / -3	Nut for foot package A30 and A40	White, black or silver
See pic	849022-2	Adjustable feet to floor screen booth, black 1-pcs	To floor screen booth

